

Forzaspira®

AG100 / AG130










**REGISTER YOUR PRODUCT
REGISTRA IL TUO PRODOTTO
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTRE O SEU PRODUTO
www.polti.com**



POLTI

NATURAL HOME FEELING

FORZASPIRA AG100 - AG130

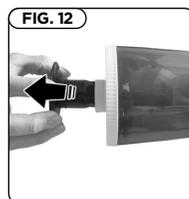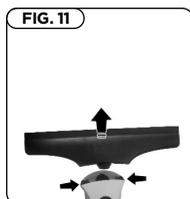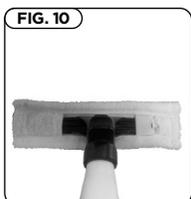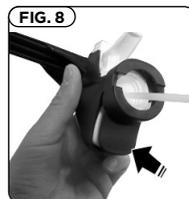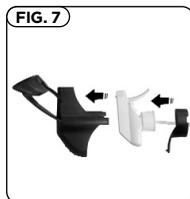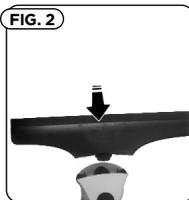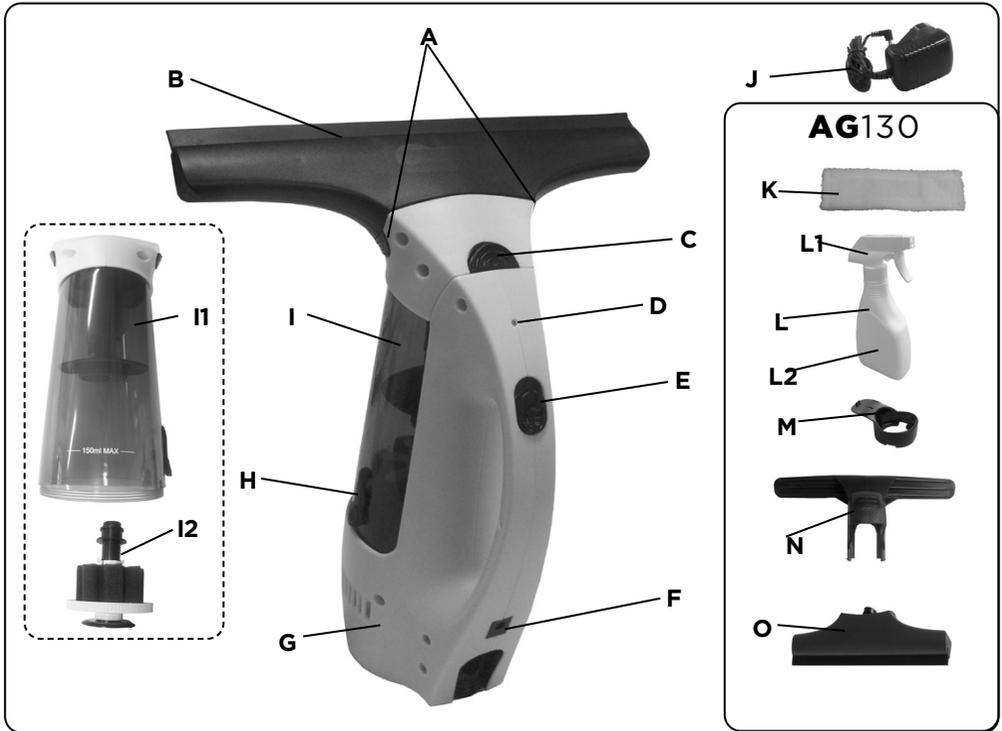

PRECAUTIONS**KEEP THESE INSTRUCTIONS**

- Read these instructions carefully before using the appliance.
- Any use which does not comply with these instructions will invalidate the warranty.
- If this instruction manual is lost, it is possible to review it and/or download it from the web site www.polti.com
- Unpack the product and make sure it is intact as well as all the accessories listed in the key. If in doubt, do not use the product and contact an Authorized Service Centre.
- This appliance has been designed only for domestic use.
- This appliance can be used by children over 8 years old, by people with reduced physical, sensory or mental abilities or by inexperienced persons provided they are instructed in advance on its safe use and only if informed of the dangers inherent to the product.
- Children must not play with the appliance.
- The cleaning and maintenance of the appliance and the battery charger may not be done by children without the supervision of an adult.
- Keep all the parts of the packaging out of the reach of children, they are not a toy. Keep the plastic bag out of the reach of children: danger of suffocation.
- In case the appliance and the battery charger accidentally fall and/or there are visible signs of damage do not use the appliance but have it checked by an authorized Service Centre as the internal safety features may have been affected.
- In case of breakdown or malfunction switch off the appliance and never attempt to disassemble it, but refer to an authorized Polti Service Centre.
- To avoid prejudicing the safety of the appliance when repairing or replacing accessories, use only original spare parts.

SAFETY WARNINGS:Risk of electric shock and/or short circuit:

- The battery charger is used to charge the batteries located inside the appliance. Do not use the appliance with the battery charger connected.
- The wiring system to which the battery charger is connected must always comply with the laws in force.
- Before connecting the battery charger make sure that the mains voltage corresponds to that indicated on the plate data.
- If the battery charger is left unused, always disconnect it from the mains.
- Before performing any maintenance operation, always turn the equipment off.
- Do not pull the battery charger power cable out of the socket, but grasp the plug itself to avoid damage to the socket.
- Do not allow the power cable of the battery charger to be twisted, crushed, stretched, or come into contact with sharp or hot surfaces.
- Do not use the battery charger if the power cable or other important parts of the appliance are damaged. Instead, contact an authorised service centre.
- If the battery charger with its relative cable is visibly damaged, replace it immediately with a Polti original spare part. Never under any circumstance try to repair it.
- Do not use electric extension leads that are not authorized by the manufacturer, as they may cause damage or fire.
- Never touch the battery charger with wet hands or feet in particular when the cable is plugged into the mains.
- Do not use the battery charger when barefoot.
- Do not use the battery charger near washbasins, bathtubs, showers or containers full of water.
- Never immerse the appliance, the cable or the plugs in water or another liquid.

SAFETY WARNINGS:**Risk of injuries and correct use of the appliance:**

- This appliance has been designed only for domestic use.
- Use of the appliance in places where there is a danger of explosions and fire is prohibited.
- Use this appliance for cleaning and drying smooth surfaces such as glass, tiles and mirrors.
- Only use with water and possibly a non-foaming glass detergent commonly available on the market.
- Do not use to vacuum large quantities of water.
- Do not use as a vacuum cleaner.
- Do not vacuum explosive or corrosive products, those that burn or are hazardous to one's health, irritant, lethal, toxic or foam producing.
- Do not suck up burning or incandescent objects such as embers, ash or other material in which combustion is taking place.
- Never leave the appliance exposed to the weather.
- Do not place the appliance near live elements, electric stoves or any other source of heat.
- Do not expose the appliance to temperatures under 0°C or over 40°C
- Press the buttons only with a finger, without excessive force and avoid using a pointed object such as a pen.
- Do not obstruct or insert objects into the ventilation slots.
- Do not point and spray the jet into the eyes.
- Do not spray on devices that have electric components such as for examples inside ovens.
- Before using the product and the cloth on delicate surfaces do a test on a hidden point.



Read these instructions carefully before using the appliance.

Congratulations on your purchase and welcome to the Polti world of cleaning.

We know how important it is to be able to depend on a reliable appliance for every day cleaning, that is why your product has been designed to let you experience efficient as well as quick, fast cleaning. Effective suction and the easy, intuitive use make your appliance the ideal assistant.

Please also visit our website www.polti.com, where you can find all the information and advice necessary to better use the product, and where you can register your newly purchased product to receive exclusive benefits.

KEY

- A)** Window cleaning frame release buttons
- B)** 28 cm window cleaning frame
- C)** Tank release button
- D)** Operating / recharge LED
- E)** ON/OFF switch
- F)** Recharge socket
- G)** Machine body
- H)** Tank emptying stopper
- I)** Tank Unit
 - I1)** Tank
 - I2)** Tank stopper w/filter
- J)** Power supply
- K)** Cloth (*)
- L)** Vaporiser (*)
 - L1)** Sprayer
 - L2)** Bottle
- M)** Fastening ring (*)
- N)** Cloth support (*)
- O)** 17 cm small window cleaning frame (*)

(*) Only for Model AG130.

CE *This unit conforms with EC-directives 2004/108/CE (EMC) and 2006/95/CE (low voltage).*

Politi S.p.A. reserves the right to change equipment or accessory specification without prior notice.

CORRECT USE OF THE PRODUCT

This appliance is intended for home use for cleaning damp, smooth surfaces such as windows, mirrors or tiles, in accordance with the instructions provided in this manual. Please read these instructions carefully and keep them for future reference.

Polti declines liability for any damage or accident derived from any use of this appliance which does not comply with the instructions contained in this booklet.

ATTENTION

Directive 2002/96/EC (Waste Electrical and Electronic Equipment - WEEE): information for users

This product complies with EU Directive 2002/96/EC.



The crossed-out wastebasket symbol on the appliance means that at the end of its useful lifespan, the product must be disposed of separately from ordinary household wastes.

The user is responsible for delivering the appliance to an appropriate collection facility at the end of its useful lifespan.

Appropriate separate collection to permit recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. For more information on available collection facilities, contact your local waste collection service or the shop where you bought this appliance.

UNPACKING

- ♦ Remove the appliance from the packaging, checking that the product is whole and that all the parts are there.

CHARGING APPLIANCE

The appliance is not supplied with the battery charged, therefore please charge the product before use.

To charge the appliance, proceed as follows:

- ♦ Connect the power supply plug (**J**) to the special socket (**F**) of the appliance.
- ♦ Insert the power supply plug (**J**) to a suitable power socket.
- ♦ The charging / operating LED (**D**) will start flashing red. When the LED (**D**) turns a steady green (after about 2 1/2 hours), the appliance is charged and ready for use.

Note:

- When the battery is discharged, the appliance will stop working and the LED (**D**) will be off.
- A full battery recharge makes it possible to clean up to 80 m2 of surface.

VAPORISER (L) (*)**ASSEMBLY**

- ♦ Unscrew the sprayer (**L1**) from the bottle (**L2**).
- ♦ Insert the washing support (**N**) into the sprayer (**L1**) and lock it with the fastening ring (**M**) (Fig. 7 - 8 - 9).
- ♦ Insert the cloth (**K**) and lock it with the Velcro (Fig. 10).

FILLING

- ♦ Fill the bottle (**L2**) with water and possibly non-foaming glass detergent that is commonly available on the market.
- ♦ Tighten the sprayer (**L1**) including the washing support with the cloth, to the bottle.

USE

- ♦ Spray the surface to be cleaned and cleanse with the cloth.
- ♦ Run the appliance over the area as shown in the Chapter "Use".

(*) Only for Model AG130.

USE

- ◆ Assemble the 28 cm window cleaning frame. **(B)** or the small 17 cm window cleaning frame **(O)***, based on the size of the surface to be cleaned, to the base until it is hooked (Fig. 2).
- ◆ Clean the window.
- ◆ Turn on the appliance by moving the switch forward **(E)** (Fig. 3). The operating/recharge **(D)** LED will turn on.
- ◆ Place the window cleaning frame on the upper part of the window and using a slight pressure move downward (Fig. 4).
- ◆ Once the cleaning operation is finished, turn off the appliance by moving the switch backward **(E)**.

(*) Only for Model AG130.

EMPTYING THE DIRT COLLECTION TANK

When the Max level of dirty water is reached in the tank **(I)**, it must be emptied as follows:

- ◆ Turn the appliance off.
- ◆ Pull the tank stopper **(H)** (Fig. 5).
- ◆ Tilt the tank so that the dirty water can come out (Fig. 6).
- ◆ Replace the tank stopper.
- ◆ Resume cleaning operations.

WARNING: If the maximum filling level is exceeded, small quantities of water can leak out of the ventilation slots. Always empty the tank before the maximum filling level is reached.

CARE OF YOUR APPLIANCE

- **Before performing any maintenance operation, make sure that the appliance is off and/or disconnected from the mains.**
- To clean the body of the appliance, simply use a moist cloth. Do not use solvents or detergents which may harm the body material.
- The cloths provided can be washed by following the instructions included on the label.

CLEANING OF THE WINDOW CLEANING FRAME (B) - (O)*

- ◆ Release the window cleaning frame and remove it from the base (Fig. 11).
- ◆ Rinse the frame **(B)** - **(O)*** under running water and let it dry.

(*) Only for Model AG130.

CLEANING THE TANK UNIT (J)

- ◆ Remove the tank unit **(I)** (Fig.12), empty it (see paragraph "Empty water from tank"). Unscrew the tank stopper w/filter **(I2)** and squeeze it (Fig. 13), after which rinse all the components under running water and let them dry.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance won't turn on	Battery discharged	Charge the appliance
	ON/OFF switch (E) is turned off	Turn on the ON/OFF switch (E).

WARRANTY

WARRANTY CONDITIONS

For repairs, the appliance must be accompanied by proof of purchase.

Polti products are guaranteed to the original purchaser for two years from the date of purchase as shown on a valid receipt issued by the seller.

This guarantee does not affect the consumer's rights under European Directive 99/44/CE regarding certain aspects of the sale and guarantee of consumer goods; consumers should address claims under these provisions to the retailer where they purchased the goods.

This guarantee is effective in countries where European Directive 99/44/CE has been implemented. Local guarantee legislation applies in all other countries.

WHAT THE WARRANTY COVERS

During the guarantee period, Polti will repair products with defects in workmanship or materials at no charge to the customer for either labour or materials.

In case of irreparable defects, Polti S.p.A. may replace the product free of charge.

A minor patent defect for which it was not possible, or is excessively expensive, to repair or replace does not give the right to terminate the contract.

To have work performed under this guarantee, consumers must contact an Authorised Polti Technical Assistance Centre. The consumer must present a valid receipt issued by the seller at the time of purchase as evidence of the date of purchase; without proof of purchase and the relative date, the work will be charged. Therefore, please store your receipt carefully for the entire warranty period.

WHAT THE WARRANTY DOES NOT COVER

The warranty is subject to limitations and does not cover defects due to improper use or use other than that indicated in the instruction booklet which forms an integral part of the sales contract of the product. The warranty does not cover defects resulting from force majeure (fires, short circuits) or caused by third parties (tampering). The warranty does not cover damages caused by the use of non-original Polti parts, repairs or alterations performed by staff or service centres not authorised by Polti.

The guarantee does not cover parts that are damaged by wear or subject to normal wear (consumables such as filters, brushes, etc.). The guarantee doesn't cover any possible damage caused by limescale. Polti will accept no responsibility for any injury to people or animals or damage to objects directly or indirectly resulting from failure to follow the instructions provided in the instruction booklet, in particular the warnings and product maintenance instructions.

The warranty does not cover the assembly of accessories that have been modified or are not adapted to the appliance.


REGISTER YOUR PRODUCT

Register your appliance on our website at www.polti.com.

You will receive an email containing a promotional code and the instructions for taking advantage of the current offers.


To register your Polti product, you must enter, in addition to your personal information, the appliance serial number (SN) which you will find on the silver label, located under the product:

Example:

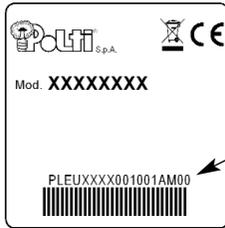

SERIAL NUMBER
(18 digit) SN

To save time and keep your serial number to hand, write it in the space provided on the back cover of this manual.

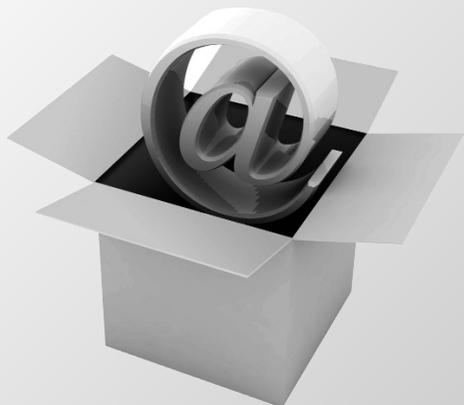

SN:



**REGISTER YOUR PRODUCT
REGISTRA IL TUO PRODOTTO
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTE O SEU PRODUTO**

www.polti.com

**YOU WILL ENJOY SPECIAL OFFERS
POTRAI USUFRUIRE DI OFFERTE SPECIALI
VOUS POURREZ BÉNÉFICIER D'OFFRES EXCLUSIVES
PODRÁ DISFRUTAR DE OFERTAS ESPECIALES
SIE KÖNNEN DIE SONDERANGEBOTE NUTZEN
VOCÊ APRECIARÁ AS NOSSAS OFERTAS ESPECIAIS**

CALL CENTER

ITALIA SERVIZIO CLIENTI	848 800 806
FRANCE SERVICE CLIENTS	04 786 642 10
ESPAÑA SERVICIO AL CLIENTE	02 351 227
PORTUGAL SERVIÇO AO CLIENTE	707 780 274
UK CUSTOMER CARE	0845 177 6584
DEUTSCHLAND KUNDENDIENST	03222 109 069 6

OTHER COUNTRIES, PLEASE VISIT WWW.POLTI.COM



**Politi S.p.A. - Via Ferloni, 83
22070 -Bulgarograsso (CO) - Italy**