

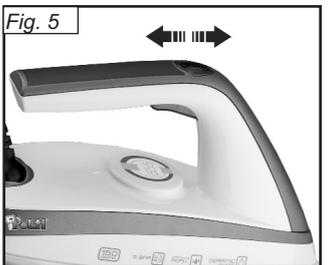
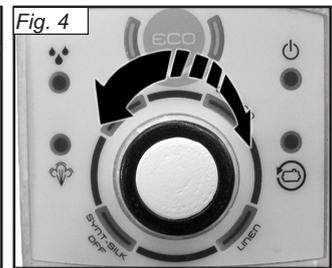


Vaporella®

FOREVER 1800 ECO PROGRAM

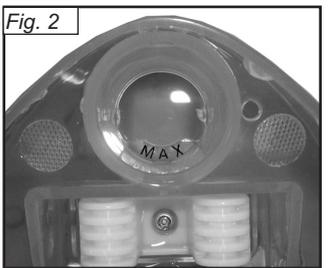

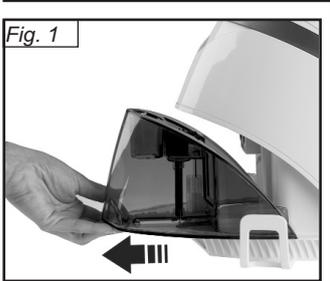

VAPORELLA FOREVER 1800 ECO PROGRAM



Read these instructions carefully before using the appliance.

Dear Customer

Thank you for your confidence in buying this Polti product for perfect ironing in less time.

Your Vaporella has been designed to ensure maximum ironing comfort; its quality materials make it a reliable work-mate.

The powerful jet of Vaporella steam acts on the fabrics eliminating every crease.

Therefore it is not necessary to press on or iron repeatedly. Just let the iron slide over the garment to obtain perfect ironing, saving time and effort.

With Vaporella it is possible to iron vertically to revive fabrics and take out bad smells from jackets, clothes and overcoats.

Vaporella Forever 1800 Eco Program, with its 5 operating modes ensures use of just the right quantity of steam and the most appropriate iron temperature at all times, eliminating creases without useless energy consumption. The Eco function allows for perfect clothes whilst saving up to 30% electricity.*

Thanks to its self-refilling system, Vaporella is quickly ready for use and does not need any interruption to your ironing for refilling the boiler.

Before using Vaporella, we recommend reading these instructions carefully.

(* in Linen mode, energy consumption is 30% greater than Eco mode)

KEY

- | | |
|----------------------------------|--|
| 1) Main switch | 8f) ECO function indicators |
| 2) Water tank | 8g) Water shortage indicator |
| 2a) MAX water level | 8h) Wool programme indicator |
| 3) Carrying handle | 8i) Steam ready indicator |
| 4) Steam request button | 8l) Synthetic / Silk programme indicator |
| 5) "Iron heating" indicator | 9) Power supply cable |
| 6) Continuous steam jet button | 10) Monotube housing |
| 7) Flex (electric cable + steam) | |
| 8) Selection dial | |
| 8a) Linen programme indicator | |
| 8b) Kalstop addition indicator | |
| 8c) Cotton programme indicator | |
| 8d) On indicator | |
| 8e) ECO function button | |



This unit conforms with EC-directives 2004/108/CE (EMC) and 2006/95/CE (low voltage).

Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

PRECAUTIONS

KEEP THESE INSTRUCTIONS

- Read these instructions carefully before using the appliance.
- Any use which does not comply with these instructions will invalidate the warranty.

SAFETY WARNINGS:

Risk of electric shock and/or short circuit:

- The wiring system to which the appliance is connected must always comply with the laws in force.
- Before connecting the appliance, make sure that the mains voltage is the same as the voltage indicated on the data label of the appliance and that the power outlet is connected to earth.
- Always turn off the appliance at the on/off switch before unplugging it.
- If the appliance is left unused, always disconnect it from the mains. Never leave the appliance unattended with the cable plugged into the mains.
- Always make sure the appliance is unplugged before performing maintenance work of any kind.
- Do not pull the power cable out of the socket, but grasp the plug itself to avoid damage to the socket.
- Do not allow the power cable to be twisted, crushed, stretched, or come into contact with sharp or hot surfaces.
- Do not use the appliance if the power cable or other important parts of the appliance are damaged. Instead, contact an authorised service centre.
- Do not use electric extension leads that are not authorized by the manufacturer, as they may cause damage or fire.
- Never touch the appliance with wet hands or feet with the cable plugged into the mains.
- Do not use the appliance when barefoot.
- Do not use the appliance near washbasins, bathtubs, showers or containers full of water.
- Never immerse the appliance, the cable or the plugs in water or another liquid.
- Do not direct the steam jet at live electrical and/or electronic equipment or at the appliance itself.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

SAFETY WARNINGS:

Risk of injury and/or burns during use of the appliance:

- Use of the appliance in places where there is a danger of explosions is prohibited.
- Do not use the product with toxic substances.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- Children should be supervised to ensure that they do not play with the appliance.



ATTENTION: High temperature. Risk of scalding!
If indicated do not touch the parts on the product

- In case the appliance is accidentally dropped, it is necessary to have it checked by an authorized Service Centre as the internal safety features may have been affected.
- In case of breakdown or malfunction switch off the appliance and never attempt to disassemble it, but refer to an authorized Polti Service Centre.
- This appliance is equipped with safety devices which are to be replaced only by a suitably qualified technician.
- Before cleaning or storing the appliance, always first ensure that the appliance has cooled down completely.
- Do not direct the steam jet at people, animals or debris.
- High-pressure jets can be dangerous if used improperly. Do not direct the steam jet at people, live electrical equipment or the appliance itself.
- Never place your hands inside the jet of steam.



ATTENTION:
Risk of scalding!

- While refilling with water, switch off and disconnect the appliance from the mains.
- Do not use if the appliance has been dropped, has visible signs of damage or leaks.
- If ironing whilst sitting down, take care to ensure that the jet of steam is not an-

gled towards your legs. Steam can scald.

- Before connecting the appliance to the current, ensure that the continuous steam jet button is not pressed.
- Never leave the iron unattended when it is plugged in.

SAFETY WARNINGS:

using the appliance:

- This appliance has been designed to work with normal tap water. Absolutely do not use distilled water, dryer condensate water, perfumed water, rain water, battery water, water from air conditioning systems and the like. Do not use chemical substances or detergents.
- We recommend you use original Polti products only, as products of other brands may not be suitable for use in Polti products and could cause damage.
- Never leave the appliance exposed to the weather.
- Do not place the appliance near a live element, an electric stove or any other source of heat.
- Do not expose the appliance to temperatures under 0°C or over 40°C
- Press the buttons only with a finger, without excessive force and avoid using a pointed object such as a pen.
- Do not wind the power cable around the appliance, especially when the appliance is still hot.
- To avoid prejudicing the safety of the appliance when repairing or replacing accessories, use only original spare parts.
- Let the appliance cool down before cleaning it.
- Before storing the appliance make sure that it has completely cooled down.
- It is necessary to keep the unit in horizontal position during operation.
- Always rest the appliance on a stable surface.
- Iron only on supports that are heat resistant and which allow the steam to permeate.
- If the iron rest mat needs to be replaced, only use original spare parts.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, make sure that the surface on which the stand is placed, is stable.
- Do not place the hot appliance on heat-sensitive surfaces.

CORRECT USE OF THE PRODUCT

This appliance is intended for home use as a steam generator as described and in accordance with the instructions provided in this manual. Please read these instructions carefully and keep them, as you may find them useful in future.

Polti Spa declines liability for any damage or accident derived from any use of VAPORELLA which does not comply with the instructions contained in this booklet.

ATTENTION

Directive 2002/96/EC (Waste Electrical and Electronic Equipment - WEEE): information for users

This product complies with EU Directive 2002/96/EC.



The crossed-out wastebasket symbol on the appliance means that at the end of its useful lifespan, the product must be disposed of separately from ordinary household wastes.

The user is responsible for delivering the appliance to an appropriate collection facility at the end of its useful lifespan.

Appropriate separate collection to permit recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. For more information on available collection facilities, contact your local waste collection service or the shop where you bought this appliance.

IMPORTANT

Before leaving our factory all our products are rigorously tested. This is the reason why your VAPORELLA may contain some residual water in the boiler.

PREPARATION

- Remove the water tank (2) from the appliance, pulling it out as shown in fig.1.
- Fill the tank with water up to the MAX level (2a) (fig.2).

This appliance has been designed to work with normal tap water.

However, since water contains limestone by nature, which may cause scaling in the long run, we recommend using a 50/50 mixture of tap water and demineralised water or treated with softening systems. To use tap water and avoid scale formation, we recommend the addition of the special natural scale removal agent Kalstop FP2003.

Absolutely do not use distilled water, dryer condensate water, perfumed water, rain water, battery water, water from air conditioning systems and the like. Do not use chemical substances or detergents.

- Connect the tank up to the appliance again, being careful to insert it correctly.
- Slowly pull out the power cable (9) to the desired length as shown in fig. 3.
- Plug the power cable into a suitable outlet, which must be grounded.
- Press the main switch (1); all the indicators will light up briefly before leaving only the on indicator (8d) lit and the "iron heating" light (5) on.
- The noise you hear when the appliance comes on and periodically during use is due to the water filling system.

INSTRUCTIONS FOR USE

Check the manufacturer's label on the garment, and interpret the symbol on the label as follows:

- It is best not to use steam when ironing silk or synthetics, as iron temperature and pressure will be enough to ensure good results. Use the WOOL setting if you wish to iron particularly delicate fabrics (synthetics and silk) with steam.
- To optimise ironing time, iron the most delicate fabrics (SYNTH/SILK settings) before heavier fabrics. If you do it the other way around, even if steam production is not stopped, you will have to wait for the iron and the boiler to cool down to the selected iron temperature and steam pressure.

Check, based on the following table, the most appropriate type of ironing:

DRY IRONING

Adjust the selection dial (8) (fig. 4) to the SYNT SILK OFF position.

VAPORELLA FOREVER 1800 ECO PROGRAM

Wait until the iron heating light (5) turns off. This mode is recommended for:

Ironing instructions given on the label 		SETTING
Type of fabric:	Nylon	
	Silk	
	Acetates	
	Viscose	
	Acrylic Polyester	
	Velvet	indicator 8l on

Adjust the selection dial (8) to the LINEN position, for the following types of fabric:

Ironing instructions given on the label 		SETTING
Type of fabric:	Linen	
		indicator 8a on

ENGLISH

NOTE:

- After 10 minutes of use, since the boiler is not connected, the appliance automatically goes into stand-by. The indicator (8d) will start to flash.

To re-activate the appliance, press the steam request button (4) for at least 1 second.

STEAM IRONING

For a steam iron, the correct programme must be set by turning the selection dial (8), to the type of fabric to be ironed (Fig. 4).

Adjust the selection dial (8) to the WOOL position, for the following types of fabric:

Ironing instructions given on the label 		SETTING
Type of fabric:	Wool	
	Fibres	
		indicator 8h on

Adjust the selection dial (8) to the COTTON position, for the following types of fabric:

Ironing instructions given on the label 		SETTING
Type of fabric:	Cotton	
	Denim	
		indicator 8c on

- After setting the desired programme, the steam ready light (8i) flashes. (except if using the SYNT SILK OFF programme, in which case the boiler remains off).
- Before starting to iron, wait for the steam pressure indicator (8i) to stay on continuously and the "Iron heating" indicator light (5) to go out.
- Press the steam button (4) on the iron to make steam come out of the holes on the soleplate. Releasing the button, the flow stops.

NOTE: during initial operation of the iron, a few drops of water mixed with steam may come out of the soleplate until the temperature stabilises. It is advisable to direct the first jets of steam onto an old cloth until a uniform jet of steam is obtained.

- In order to have a continuous steam jet, move the button (6) forwards. Steam will keep on coming out, even releasing the steam request button. To interrupt the outlet, move the button (6) backwards (fig. 5).

NOTE:

- The "Iron heating" indicator light (5) turns on and off during use. This indicates that the electrical resistor has started to work to keep the temperature in the iron steady. This is a normal occurrence, and it is therefore possible to continue ironing.

 The symbol on the label means: do not iron

ECO FUNCTION

With the ECO function on, the appliance sets itself to a medium level of both steam pressure and iron temperature, thereby optimising consumption whilst ensuring optimum ironing of the hardest-wearing fabrics (cotton / jeans / linen).

Do not use this mode for ironing synthetic, silk and wool clothing.

Set the function by pressing the ECO button (8e). The indicators will light up (8a - 8c - 8f) to indicate that the function has been activated.

The steam ready indicator (8i) will start to flash. Before starting to iron, wait for the steam ready indicator (8i) to stay on continuously and the "Iron heating" indicator light (5) to go out.



To deactivate the ECO function, just press the ECO button again (8e).

AUTO-KALSTOP FUNCTION

Water naturally contains a certain amount of calcium and magnesium salts, which determine its hardness and cause lime scale to build up over time. To prevent this problem Polti has developed KALSTOP FP 2003 for natural prevention of lime scale build-up on steam cleaners and irons with separate boiler units.

To keep your boiler working properly and lengthen your Vaporella's useful lifespan, Polti has fitted Vaporella Forever 1800 Eco Program with the special Auto-Kalstop function which automatically indicates when you need to use Kalstop.

Whenever the Add Kalstop (8b) indicator light comes on:

- Turn off the appliance with the main switch (1).
- Unplug from the mains electricity (9).
- Remove the water tank (2) and fill it with water (if necessary) up to the MAX level (2a).

- Pour the contents of a Kalstop phial into the water tank (2).
- Connect the tank (2) to the appliance again making sure that it is inserted correctly.
- Reconnect the plug to the mains electricity (9).
- Hold the steam button down (4) and turn the appliance on using the main switch (1), still holding the steam button down (4).
- The Kalstop indicator light will come on (8b). Hold the steam button down (4) until the Kalstop indicator light turns off (8b).
- You may now resume using the appliance as usual.

NOTE: When the Add Kalstop indicator light (8b) comes on, you can continue using the appliance. It is possible to continue ironing. But adding Kalstop FP 2003 immediately will help keep your Vaporella in perfect working order for longer.

Constant use of Kalstop FP2003:

- prolongs your Vaporella's useful lifespan;
- improves steam quality;
- increases the boiler's efficiency and saves energy.

Kalstop FP2003 is an organic, biodegradable, non-toxic product; a tannic complex which prevents lime scale formation, reduces the presence of oxygen in the water (which corrodes metals) and protects the walls of the boiler.

Kalstop FP2003 is sold in packages of 20 phials at household appliance stores, at Polti authorized service centres or at www.polti.com.

Use original Polti products only. Products by other brands may not be suitable for use in Polti appliances and could cause damage.

NO WATER

The lack of water in the tank (2) is signalled by the indicator light (8g) coming on.

To continue working, just top up the water in the tank (2) as described in the paragraph "PREPARATION".

ATTENTION: before removing and filling the water tank (2), make sure that the machine has been turned off and the power plug (9) has been disconnected from the mains.

PUTTING AWAY THE APPLIANCE

Before replacing the appliance, make sure that it has cooled completely.

- Gently pull the power supply cable (9) until you hear the first click and, guiding it, allow it to automatically wind around the reel (Fig. 3).
- Position the monotube (7) in the specific housing (10) (Fig. 6).
- To move Vaporella, use the practical carrying handle (3) (fig. 7).

ATTENTION: before moving Vaporella with the handle, make sure that the power supply cable (9) and monotube (7) have been stored as described previously.

ENERGY SAVING STAND-BY FUNCTION

After 10 minutes without use, the appliance automatically goes into stand-by mode, switching off both the boiler and iron.

The indicator (8d) will start to flash.

To re-activate the appliance, press the steam request button (4) for at least 1 second.

CARE OF YOUR VAPORELLA

- **Before attempting any maintenance operation, always disconnect the appliance from the mains.**
- To clean the body of the appliance, simply use a moist cloth. Do not use solvents or detergents which may harm the body material.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The on indicator (8d) is off.	Power supply cable (9) not inserted Main switch (1) is off	Connect the power supply cable (9) to a suitable electric socket. Turn on the main switch (1).
The appliance is on but it is not producing steam	Water tank (2) is empty or not inserted correctly. The SYNT SILK OFF function is activated	Fill the water tank (2). Make sure the water tank is inserted correctly. Change function with steam ironing.
The Add Kalstop indicator light (8b) stays on.	You need to add Kalstop The auto-Kalstop function has not been reset	Add Kalstop Reset the function. In both cases follow the instructions in the "AUTO-KALSTOP FUNCTION" section.
During the heating phase, the indicators (8a - 8c - 8h - 8l), turn on one at a time clockwise.	The appliance does not reach the pressure selected.	Turn the machine off then turn it back on. If, after this operation, the problem persists, turn the machine off and take it to an Authorized Service Centre.
The indicators (8a - 8c - 8h - 8l) all flash together.	Fault in the electrical system.	Turn the machine off then turn it back on. If, after this operation, the problem persists, turn the machine off and take it to an Authorized Service Centre.